


How Riveting a GO-Nut ?

 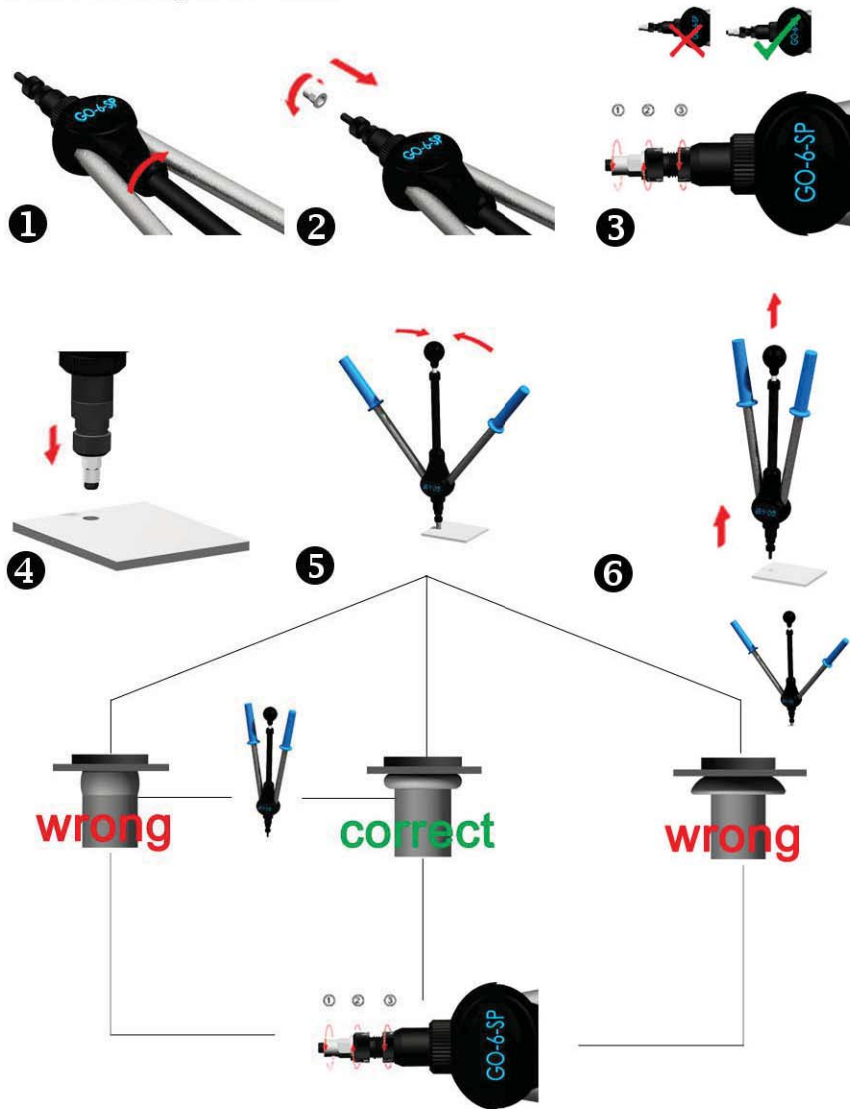


Riveting Tool Operation Instruction

GO-6-SP




GO-6-SP



Cap: M3-M6

Cap: M4-M6

How Riveting a GO-Bolt ?

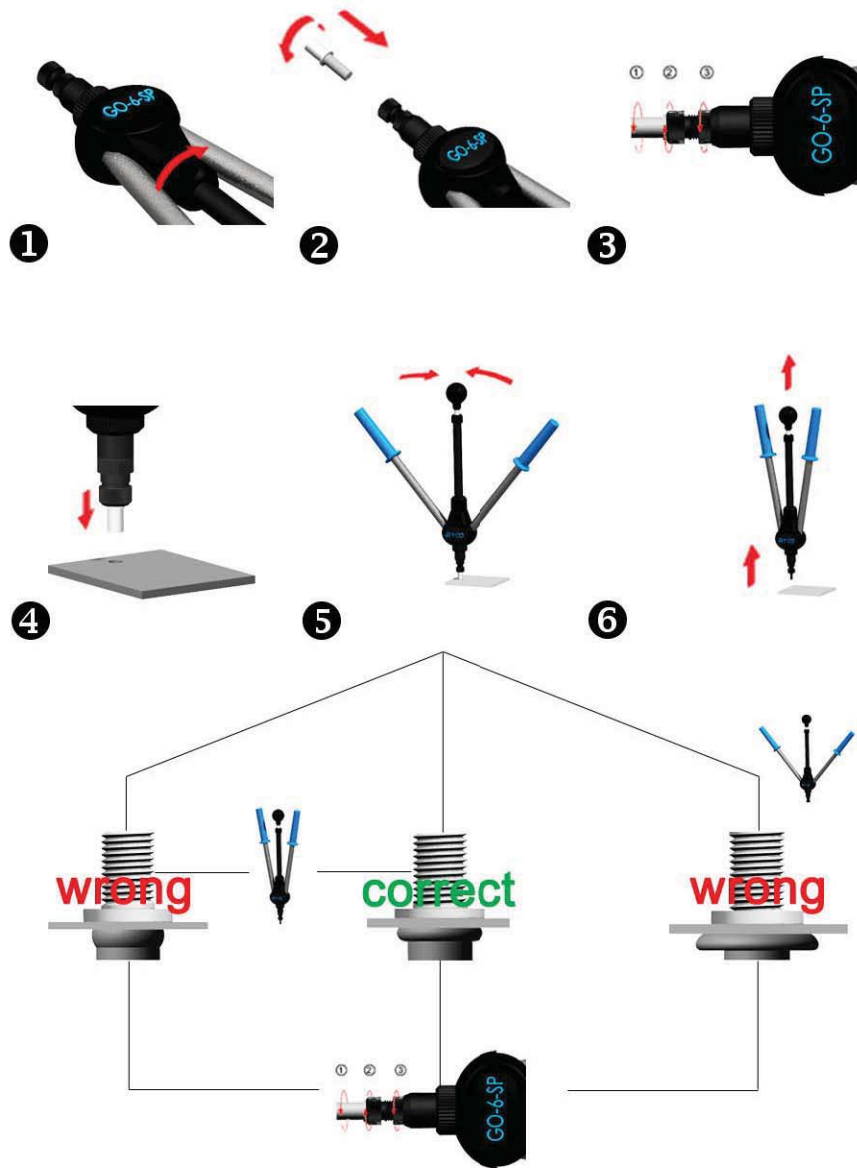

How Changing Mandrel+Anvil/Puller?

